



# ADAM-MC

A New Standard of  
Automated Cell Counter



## USER MANUAL

NESMU-AMC-001E (V.6.1)

All the materials in this user guide are protected by Korean and international copyright laws. They cannot be reproduced, translated, published or distributed without the permission of the copyright owner.

## **ADAM-MC, User's Manual**

Website : [www.nanoentek.com](http://www.nanoentek.com)

E-mail : [sales@nanoentek.com](mailto:sales@nanoentek.com)

### **Manufactured by**

#### **NanoEntek Inc.**

851-14, Seohae-ro, Paltan-myeon, Hwaseong-si, Gyeonggi-do, 18531, Korea

Tel: +82-2-6220-7942

Fax: +82-2-6220-7999

#### **NanoEntek America, Inc.**

220 Bear Hill Road, Suite 102, Waltham, MA 02451, USA

Tel: +1-781-472-2558

Fax: +1-781-790-5649

The information in this manual is described as correctly as possible and is applicable to the latest firmware and software versions, but it may be changed without prior consent or notification.

Copyright 2008, by NanoEntek, Inc.

All rights reserved. Published in Korea.

Documentation : **NESMU-AMC-001E (V.6.1)**

### **Revision History :**

V.0.0	October 2008
V.1.5	February 2009
V.2.0	June 2009
V.3.0	September 2009
V.3.5	January 2010
V.4.0	November 2010
V.5.0	February 2012
V.5.1	March 2014
V.6.0	June 2020
<b>V.6.1</b>	<b>July 2021</b>

# Table of contents

Product contents	4
Safety information	5-7
Product specifications	8
Description of ADAM-MC	9-10
<hr/>	
<b>Introduction</b>	<b>11-12</b>
Overview	11
Basic principals of counting	12
<hr/>	
<b>Getting started</b>	<b>13-19</b>
Environmental requirement	13
Installation	14
Start-up Screen	15
Error message during booting	16
Menu setting	17
System information	17
Chip selection	18
Counting method	19
<hr/>	
<b>General operation</b>	<b>20-25</b>
Introduction	20
Preparing cell	20
Counting cell	20
Operating ADAM-MC	21
Icon function	22
Result analysis	23
Error code	24
Maintenance and cleaning	25
<hr/>	
<b>Software installation</b>	<b>26-33</b>
Introduction	26
Getting started	26
Installation	27-28
Function guide	29
Function buttons	30
Data list	31
Information	31
Graph	32
Sample image of error message	33
<hr/>	
Trouble shooting	34
Warranty	35
Product list	36

# Product Contents

## ADAM-MC

The contents of the ADAM-MC are listed below:

Item	Quantity
Main device	1
User manual	1
USB Cable	1
Installation CD	1
Key Pad	1
Power Cord	1
Fuse	2
External video monitor (Optional)	1

## AccuChip kit

The contents of the ADAM AccuChip Kit are listed below :

Item	Accuchip2x Kit (Cat. No:AD2K-200)	Accuchip4x Kit (Cat. No: AD4K-200)	AccuStain solution (Cat. No:ADR-1000)
Disposable Chip	200pcs (2 channel)	200pcs (4 channel)	N/A
Solution T	2 x 12.5ml	2 x 12.5ml	4 x 12.5ml
Solution N	1 x 12.5ml	1 x 12.5ml	2 x 12.5ml
Available test Q'ty	Min.200 test/kit	Min.400 test/kit	
	Max.400 test/kit ( Only total cell count )	Max.800 test/kit ( Only total cell count )	

## Upon receiving the instrument

- Examine the instrument carefully for any damage incurred during transit.
- Ensure that all parts of the instrument including accessories listed above are included with the product.
- Any damage claims must be filed with the carrier.
- The warranty does not cover in-transit damage.
- See the 13 page to install the instrument.
- Upon receipt, store AccuStain solution at room temperature.

# Safety information

---







## Safety precautions

1. Always ensure that the power supply input voltage matches the voltage available in your location.
2. For operation environment, See page 12.
3. This machine is air-cooled so its surfaces become hot during operation. When installing it, leave a space of more than 10 cm (4 inches) around it.
4. Never insert metallic objects into the air vents of the instrument as this could result in electrical shock, personal injury and equipment damage.
5. Always set the main switch on the power supply unit to off before connecting the power cord to the wall outlet.
6. Always ensure that the grounding terminal of the instrument and that of the wall outlet are properly connected. The power cord should be connected to a grounded, 3-conductor power outlet.
7. To avoid potential shock hazard, make sure that the power cord is properly grounded.
8. Do not position the equipment in a position that is difficult to disconnect the equipment.
9. Be sure to set the main switch to off, unplug the power cord and lock the stage before moving.
10. If the instrument is broken or dropped, disconnect the cord and contact an authorized service person. Do not disassemble the instrument.
11. Use only authorized accessories.
12. Use this equipment only as specified in this manual and as specified in any documentation associated with its components. Any use of the equipment in an unspecified manner is strongly discouraged and may result in damage or injury as cautioned by signed warnings.

# Safety information

## Safety symbols

The symbols used in the ADAM-MC and the manual are explained below:

Symbol	Meaning
	The Caution symbol denotes a risk of safety hazard.
	ON (Power)
	Protective earth (Ground)
	<p>The CE mark symbolizes that the product conforms to all applicable European Community provisions for which this marking is required. Operation of the ADAM automated cell counter is subject to the conditions described in this manual.</p> <p>The protection provided by the device may be impaired if the instrument is used in a manner not specified by the manufacturer.</p>
	<p>Caution, Biohazard</p> <p>Protective measures must be used in dealing with biologically hazardous materials such as carcinogenic reagents.</p>
	<p>Disposal of your old appliance</p> <ol style="list-style-type: none"><li>1. When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2012/19/EU.</li><li>2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.</li><li>3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.</li><li>4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or visit our web-site, <a href="http://www.nanoentek.com">www.nanoentek.com</a>.</li></ol>

# Safety information

---

## Warnings

### Battery inside device

- Risk of explosion if battery is replaced by an incorrect type.
- This battery is not replaceable by a user.
- Refer to a qualified personnel.

### Cover

- Do not remove a cover or disassemble a case.
- There is no adjustable components inside the instrument.
- If malfunction is found, refer to a service personnel.

### Manual

- Do not attempt to service the equipment unless this manual has been consulted and is understood.
- This manual is available in English only.
- Failure to heed this warning may result in injury to service provider, operator from electric shock, mechanical or other hazards.

### Sample handling

- Wear gloves during sampling. User's sample may have the infectious biohazardous substance.

### Waste

- After using AccuChips, appropriately dispose it as biohazardous waste.
- Do not reuse the AccuChips.

### Operator

- Must have the general knowledge of cell counting procedure and bio safety to handle the sample that may have the infectious biohazardous substance.

# Product specifications


## ADAM-MC



Voltage	100-240V~, 50/60 Hz
Current	max. 1.8A, max 100W
Fuse	F3.15AL250V
Objective lens	4 X
LED	Green LED
CCD camera	B/W CCD
Filter	Excitation filter Dichroic filter Emission filter
Weight	9 kg
Size (W x L x H)	220 x 375 x 250 mm
Degree of protection	IPX0

## AccuChip

AccuChip 2x      AccuChip 4x

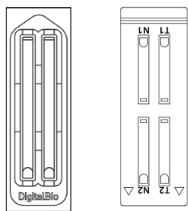

Measuring range	$5 \times 10^4$ to $4 \times 10^6$ cells/mL
Analysis time	45 sec. ~ 2min./test
<b>Loading</b> sample vol. per test	20 $\mu$ L/test (AccuChip2x) 13 $\mu$ L/test (AccuChip4X)
<b>Measuring</b> sample vol. per test	8.5 $\mu$ L/test (AccuChip2X) 3 $\mu$ L/test (AccuChip4X)

## AccuStain Solution T,N



PI (Propidium Iodide) staining of total cells (T) and non-viable cells (N).
--

## Accessories



Power cord	1.5 m
Fuse	250 VAC, 3 A; F3.15AL250V
Keypad	USB Type / 1.3 m




# Description of ADAM-MC

## Front view of ADAM-MC

The ADAM-MC, an automated cell counter, is a benchtop automated cell counter that performs cell count and viability measurements using AccuStain solution.

The front view showing various parts of the ADAM-MC is shown below:

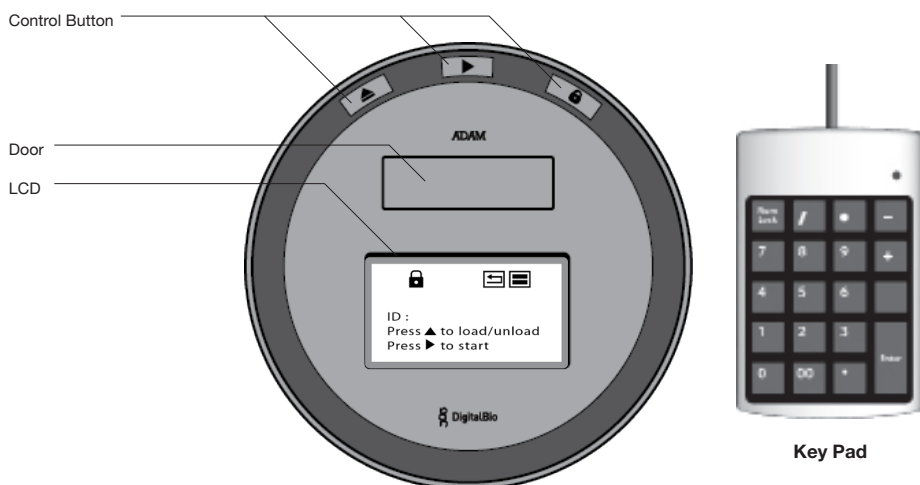

### Control buttons

- ▲ Eject : Ejects the chip holder from the ADAM-MC.
- Start : Performs all procedures of automatic counting
- 🔒 Lock : Protects the alignment of stage from external shock when the ADAM-MC is moved to the other places.

It is strongly recommended to lock ADAM-MC before turning it off.

**Door** : Chip holder comes out here.


**LCD** : Displays the process and the result.

**keypad** : Inputs the sample number less than 3 characters and press 'Enter' button.

# Description of ADAM-MC

## Front view of ADAM-MC

The rear view showing various parts of the ADAM-MC.

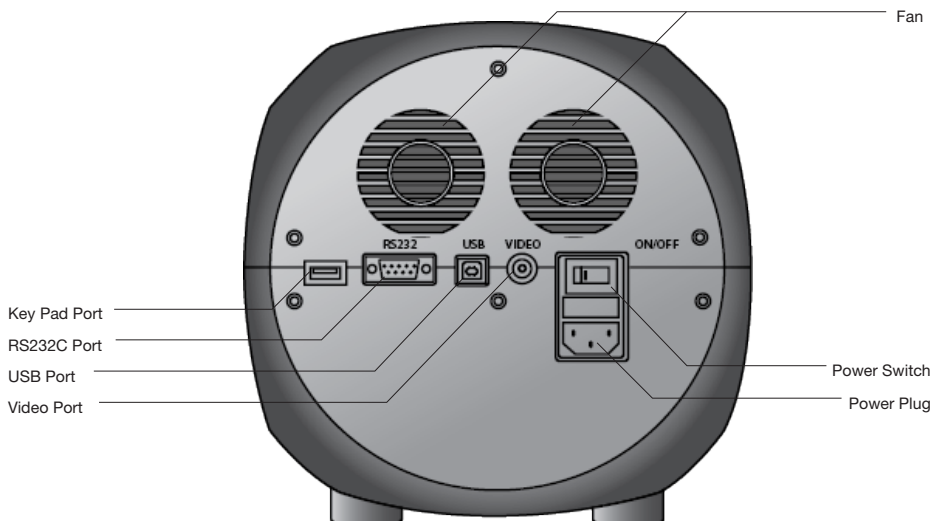

**Fan :** Cooling fan

**Power switch :** Main power on/off switch

**Power plug :** ADAM-MC power cord connection plug

**USB port :** Connect to computer with USB Cable

**RS232C port :** Not connect (Port for only QC and Service)

**Key pad port :** Keypad connection port

**Video Port :** External video monitor port


# Introduction

## Overview

Until now, cell counting and viability measurement for many types of cells have been performed manually using hemocytometer with TrypanBlue exclusion method, which is to distinguish viable cells from non-viable cells. One drawback of this method, however, is the propensity for the staining of artifacts; another drawback is that the naked eye can only differentiate between cells in a limited concentration range in the hemocytometer chamber. This combined with the potential problem of cell aggregation and limited sample volume leads to the common variation of counts normally associated with this method.

To address these problems, NanoEntek has developed the ADAM-MC, which is based on a fluorescent microscopy technique for counting cells. The ADAM-MC utilizes sensitive fluorescence dye staining, LED optics and CCD detection technologies to make the cell analysis more accurate and reliable. To count cells using ADAM-MC, the cells are mixed with a Propidium Iodide (PI) stain and directly pipetted on to a disposable plastic chip. The chip is then loaded onto a precision stage. An ADAM-MC system is automatically focused onto the chip and cells that have been stained are recorded by a sensitive CCD camera. The image results are automatically processed generating the cell count which is displayed on the front of the instrument.

Simple. Fast. Accurate. Reliable.

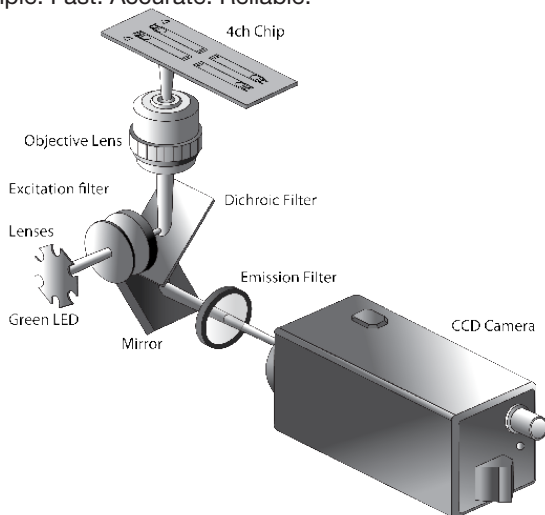

# Introduction


## Basic principals of counting

ADAM-MC is based on staining mammalian cell DNA with a fluorescent dye, Propidium Iodide (PI). PI does not enter cells with intact cell membranes or active metabolism. In contrast, cells with damaged membranes or with inactive metabolism are unable to prevent PI entering the cell. As a result, the nuclei of non-viable cells will only be stained. The ADAM-MC provides two kinds of staining solutions. AccuStain Solution T for the total cell counting is composed of the fluorescent dye (PI) and lysis solution. AccuStain solution N for the non-viable cell counting is composed of the fluorescent dye and PBS.

In order to measure the total concentration of cells, the plasma membranes of all the cells must be disrupted to stain all the Nuclei with PI. The process of disrupting and staining is achieved by treatment with AccuStain Solution T.

In the second solution, live cells remain intact and are not stained.

Only the non-viable cells are stained and detected. After treatment, the prepared cells will be loaded into the chip. The viability will be automatically calculated in the ADAM-MC software after each measurement of the total cells and the non-viable cells.

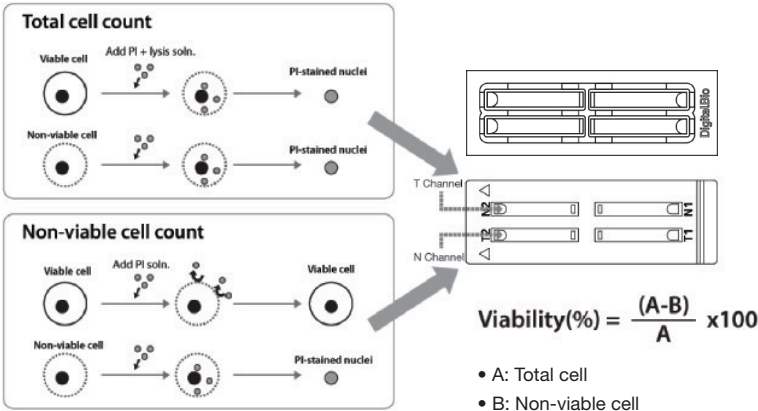

# Getting started

---

## Environmental requirements

To obtain the best results, install the ADAM-MC in a location following conditions:

1. Room temperature between 20 and 35 °C.
  - Not recommended for cold room use ( $\leq 4$  °C).
  - At low temperature ( $\leq 10$  °C), warm up the ADAM-MC for 10 min.
2. Not exposed to direct sun light.
3. Not subject to direct or continuous vibration.
4. Not subject to intense magnetic or electromagnetic fields.
5. Relative humidity between 0–95 %.
6. Area free from corrosive gases or other corrosive substances.
7. Area with very little dust or other airborne particles.
8. Allow a 10cm minimum space around the instrument for proper air flow.
9. Not allow to put heavy material on top of ADAM-MC.


# Getting started

## Installation


1. Remove all components of ADAM-MC from their box.




2. Place the instrument in a flat level and dry surface.
3. Plug to power cord into the electrical outlet.
  - Be sure to use only the power cord supplied with your instrument.
  - Powering the instrument with an unapproved power cord may damaged the instrument.

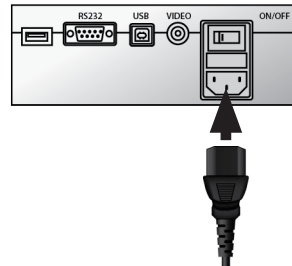

4. Plug to Keypad.

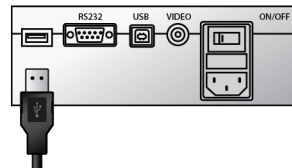


5. Turn on the power switch.
  - Make sure that the main power switch is In the “ I ” (ON) position.

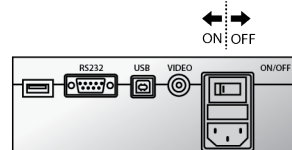

# Getting started

## Start-up screen


1. System booting.

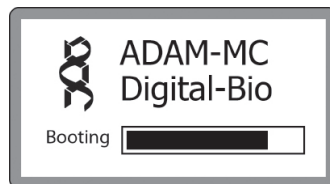


2. System will go through self diagnostic tests.

· If you get an error message, please contact your local distributor or

**[sales@nanoentek.com](mailto:sales@nanoentek.com)**

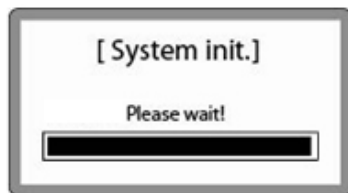


3. The home screens will be displayed as the image, no errors are detected.

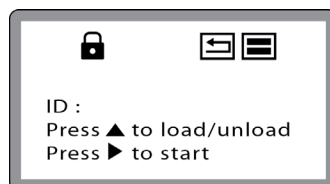


# Getting started

## Error message during booting


1. It appears when booting not working properly.
2. Turn off main power and restart device.
3. If this message still appears after restart, contact your local distributor or [sales@nanoentek.com](mailto:sales@nanoentek.com)

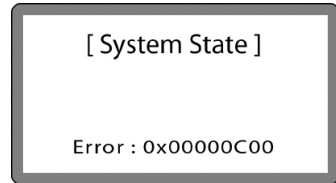

1. It appears when a chip is inserted during start up.
2. Remove the chip from a device, and do not turn on the device with a chip.
3. If this message continues to display when no chip is inserted, contact your local distributor or [sales@nanoentek.com](mailto:sales@nanoentek.com)

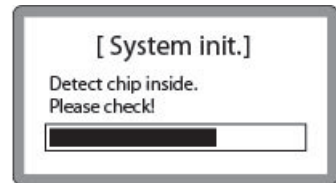

1. It appears when turning off without locking device.
2. Push the lock button before turn off the device. If this message still appears after restart, contact your local distributor or [sales@nanoentek.com](mailto:sales@nanoentek.com)

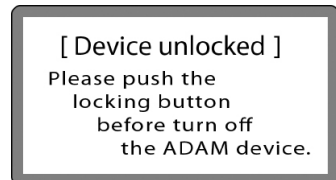




# Getting started

## Menu setting

1. You can set the menu as you press the “\*” button on the keypad from the screen for inputting sample numbers.





2. You can select the number from the menu.

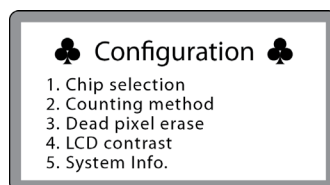

## System information

1. Check the device versions and date which have been installed in the device.
2. Select number 4 key from the menu, and press the ‘Enter’ key.
3. The screen will return to the menu screen automatically.

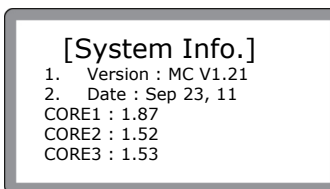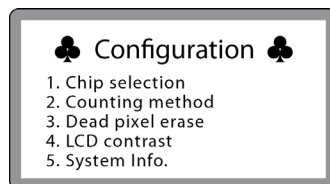

# Getting started

## Chip selection

1. Press '1' for chip selection.
  - You can select the number from the menu.
2. User can select the 2 kinds of chip type.
  - '1' : Two channel chip (AccuChip2X )
  - '2' : Four channel chip (AccuChip4X ).
3. Press '1' or '2', and Enter key.
4. After pressing the 'Enter' key, the screen will return to the menu screen automatically.

### ♣ Configuration ♣

1. Chip selection
2. Counting method
3. Dead pixel erase
4. LCD contrast
5. System Info.

### [ Chip Selection ]

1. 2-Channel chip
2. 4-Channel chip

choice : 1

### [ Chip Selection ]

1. 2-Channel chip
2. 4-Channel chip

Value is recorded!  
choice : 1

# Getting started

## Counting method

1. Press '2' for counting method. You can change the capture frame mode.

### Configuration

1. Chip selection
2. Counting method
3. Dead pixel erase
4. LCD contrast
5. System Info.

2. You can select the 60 or 30 frames in 2CH mode and 22 or 11 frames in 4CH mode for counting as well.

### [ Counting method ]

1. High precision
2. High speed

Method : 1

#### • 2CH

High Precision : 60 frames capture

High Speed : 30 frames capture

#### • 4CH

High Precision : 22 frames capture

High Speed : 11 frames capture

3. Press '1' or '2' and 'Enter' key.
4. After pressing the 'Enter' key, the screen will return to the menu screen automatically.

### [ Counting method ]

1. High precision
2. High speed

Value is recorded!

Method : 1

# General operation

## Introduction

Instruction is provided in this section for preparing the cell sample with AccuStain solution for use with disposable AccuChip for automated cell count using the ADAM-MC.

## Preparing cell

 
1. Cultivate the required number of cells.
2. Add an appropriate volume of growth media or PBS to dilute to a final concentration of  $5 \times 10^4 \text{ cells/mL}$  to  $4 \times 10^6 \text{ cells/mL}$ .

**Note :** Concentration out of this range will result in errors.  
Refer to page 23 for more information about errors.

3. Thoroughly mix the cell pellet by vortexing.
4. Check visually if any cell clumps or agglomerates are remained.

## Counting cell

### • AccuChip 2x



Total Cell	Non-viable Cell
1. Add 50 $\mu\text{L}$ of your sample to 50 $\mu\text{L}$ supplied AccuStain solution <b>T</b> .	1. Add 50 $\mu\text{L}$ of your sample to 50 $\mu\text{L}$ supplied AccuStain solution <b>N</b> .
2. Mix gently by pipetting up and down.	2. Mix gently by pipetting up and down.
3. Load <b>20 <math>\mu\text{L}</math></b> sample mixture to the AccuChipon <b>T</b> channel.	3. Load <b>20 <math>\mu\text{L}</math></b> sample mixture to the AccuChipon <b>N</b> channel.

### • AccuChip 4x






Total Cell	Non-viable Cell
1. Add 50 $\mu\text{L}$ of your sample to 50 $\mu\text{L}$ supplied AccuStain solution <b>T</b> .	1. Add 50 $\mu\text{L}$ of your sample to 50 $\mu\text{L}$ supplied AccuStain solution <b>N</b> .
2. Mix gently by pipetting up and down.	2. Mix gently by pipetting up and down.
3. Load 13 $\mu\text{L}$ sample mixture to the AccuChip on <b>T1</b> or <b>T2</b> channel.	3. Load 13 $\mu\text{L}$ sample mixture to the AccuChip on <b>N1</b> or <b>N2</b> channel.

# General operation




## Operating ADAM-MC

1. Press “**Eject(▲)**” button on the main device to eject the chip holder.
2. Insert the chip loaded with the sample onto the chip holder.
3. Press the “**Start(▶)**” button on the main device.

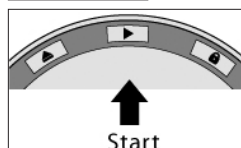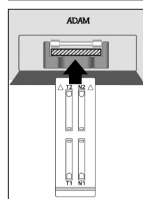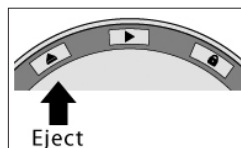

**Note** :Automatic focus will be carried out at the first time the device is booted.  
Once ADAM-MC has done the auto focus process and on the following time,focusing process will be skipped.


4. The instrument takes approximately 90 seconds to count sample.
5. After calculating the cell number, the chip will be ejected automatically. Then chip can be removed.
6. The calculated cell number per 1ml will be displayed on the screen automatically.

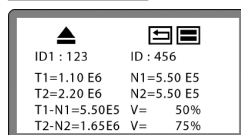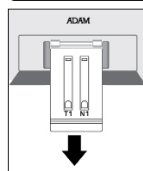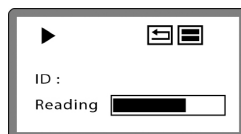





7. For another experiment, repeat the process from steps 1 ~ 5.
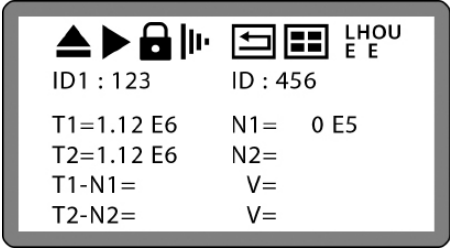
# General operation




## Icon function



1. Display a status of the performance such as Start, Eject, Lock or Insert.

Eject		Shows the Chip Holder is ejected. (After pressing the Start button).
Start		Shows when cell counting is running. (After pressing the Eject button).
Lock		Shows the Chip Holder is parked. (After pressing the Lock button).
Insert		Shows the Chip Holder is inserted. (After pressing the Eject button with AccuChip).

2. Display menu setting

	Shows that performance setting is high precision. ADAM-MC scans 22 fields in each chamber, representing a total volume of 3.1 $\mu$ L.
	Shows that ADAM-MC reads 4 Channel chip.
	Shows that ADAM-MC reads 2 Channel chip.


3. Display menu setting

LHOU E E	Error code. ( -> go to page 23. )
-------------	--------------------------------------

# General operation

## Result analysis

Press the “\*” key after menu setting. Once inputted, the screen will return to the counting mode automatically.

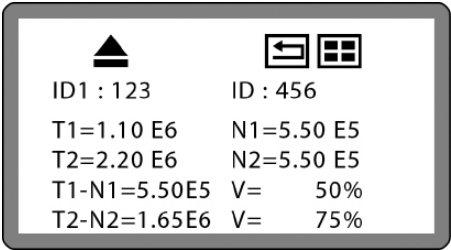


	Sample name	Number of Total cell	Number of Non-Viable cell	Viability
ID1	123	T1 (1.10E6)	N1 (5.50E5)	50%
ID2	456	T2 (2.20E6)	N2 (5.50E5)	75%


1.10E6 = 1.10 X 10<sup>6</sup> cells/mL

- The viability will be automatically calculated by the ADAM-MC software after each measurement of the total cells and the non-viable cells.
- First, the total cell number and second, non-viable cell number were measured and then the cell viability is calculated as subtracting non-viable cell counting numbers from total cell counting.

### • AccuChip 2x

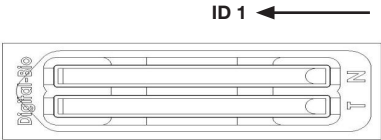


### • AccuChip 4x

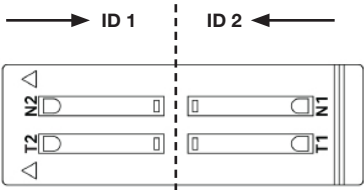


# General operation

## Error code


1. Check a chip is inside of device when turning on the device.
2. Removing the chip first, then rebooting the device.
3. If this message come up again after removing a chip, contact your local distributor or [sales@nanoentek.com](mailto:sales@nanoentek.com)

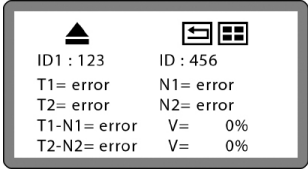

**E** : Frames with errors are over 50% of total counting frame. Frame with error is a frame that contains cells whose diameter is larger than 30µm.

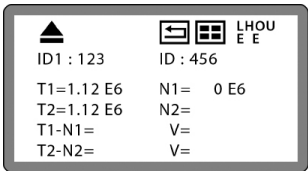


**O** : Cells are more than 4X10<sup>6</sup> cells/mL. “**Over detection range**” will be shown on report program. Cells are more than 2X10<sup>6</sup> cells/mL.

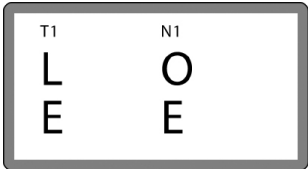

[ 2 channel ]

**H** : “**High concentration cells**” will be shown on report program.

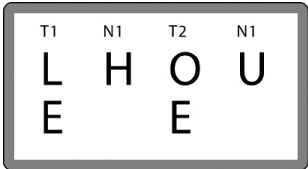

[ 4 channel ]

**L** : Cells are less than 4X10<sup>5</sup> cells/mL. “**Low concentration cells**” will be shown on report program.

**U** : Cells are less than 5X10<sup>4</sup> cells/mL. “**Under detection range**” will be shown on report program.



# General operation

---

## Maintenance and cleaning

1. ADAM-MC does not need regular maintenance.
2. ADAM-MC has no replacement of consumable materials.
3. Clean the exposed outer surface of ADAM-MC using a soft cloth and isopropyl alcohol or deionizers water.

### **CAUTION**

- Dispose of wipes in an appropriately labeled solvent contaminated waste container.

# Software installation

## Introduction

ADAM-MC software program is designed to manage and report all results from ADAM-MC.


- All measurement results are saved on the memory of ADAM-MC, automatically.
- User can download the data from the memory of ADAM-MC and export it to **Excel (\*.xls) format**.
- User can delete data from memory of ADAM-MC or can save captured images into desktop or laptop hard drive.
- The data list window consists of the sample number, chip, date, time, total, nonviable, viable, viability counting result in %.

## CAUTION

- Before running the program, check the connection of USB cable between the ADAM-MC and the laptop or desktop computer.

## Getting started

The following steps are guide for connecting USB cable:

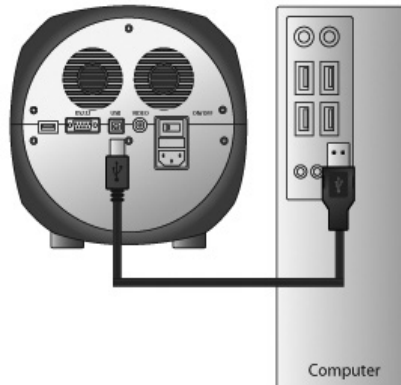

1. Connect the USB cable to ADAM-MC.
2. Connect the USB cable to desktop or laptop computer.
3. Turn on ADAM-MC and desktop computer.

# Software installation


## Installation

To install the ADAM-MC operation software, follow the directions as below:


1. Insert the installation CD-ROM into the computer.  
Then open the file  
**“Setup\_ADAM\_v1.x.x.x.exe”**.
  - Report program can be installed in Windows 2000, XP or higher version.



2. The start-up dialogue of the software, as shown like left image, will appear.

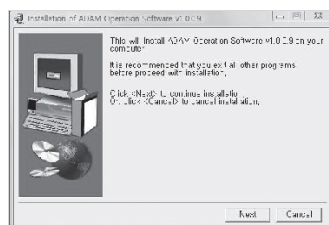

3. Click **“Next”** to start installation.

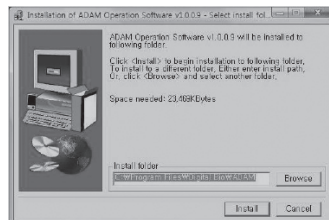


4. If you want to change installation folder, click **“Browse”** and choose the location that you want.



# Software installation

## Installation


5. After choosing installation folder, click **“Install”** to proceed with the installation.

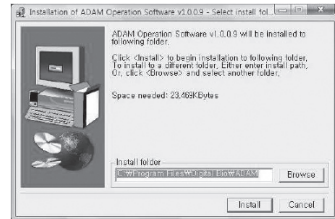


6. The computer activates the **“Installation of the Software”**.

☞ Initial installation folder is **“C:\Program Files\Digital Bio\ADAM”**.

7. Report program will be installed automatically.

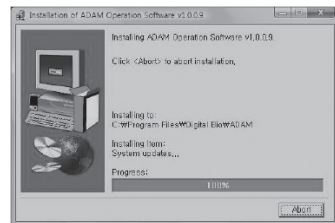

8. Click **“Ok”** to finish the installation.

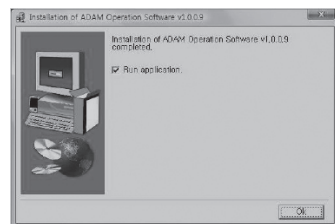

9. If the installation was successful, the report program can be found at start > All Program > ADAM.



# Software installation

## Function guide

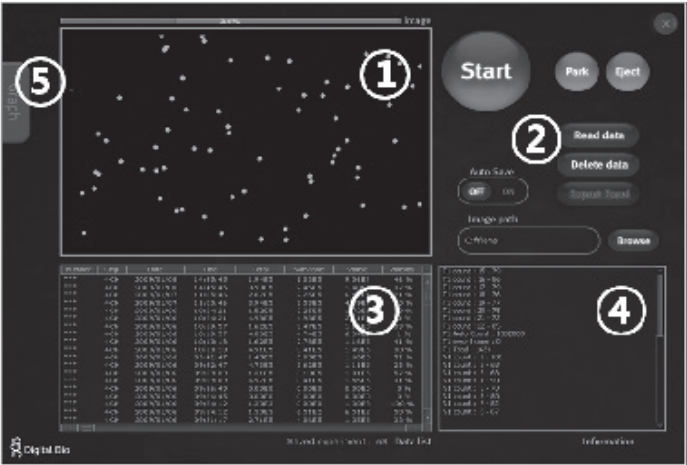


Image frame

Image captured by ADAM-MC will be shown here.

Function Buttons

Start cell counting, saving images, exporting data, and all function of Report Program are handled by using these buttons. (see p.29 for more detailed information of each button)

Data List

All saved data in ADAM-MC will be loaded and shown in data list section.

Information




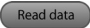
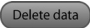



Operation and counting results of each frame will be displayed here.

Graph

Analysis of results including cell size and frame by frame counting will be shown in graph section.

# Software installation

## Function buttons

	Start cell counting
	Park (Lock) stage of ADAM-MC
	Eject chip holder out of ADAM-MC
	Load the experiment data from the memory of the main device.
	Delete all of the loaded data and memory of the main device.
	Transfer the data list to Excel format and saves it.
	<p>Turn on or off automatic image save option.</p> <p>Default image save folder is "C:\Program Files\Digital Bio\ADAM\Images". Images will be saved until your hard drive has no more capacity to save.</p> <p>Be sure to set Auto Save off, unless you need to save images.</p> <p>Example of saved image file: 081221(yymmdd)-203482(hhmmss)-N1(channel name)-002.bmp</p>
	Choose folder to save images automatically.

# Software installation

## Data list

Number	Chip	Date	Time	Total	Nonviable	Viable	Viability
***	4CH	2008/12/14	18:34:58	6.37E4	5.65E4	7.24E3	11 %
***	4CH	2008/12/14	18:34:58	5.73E4	7.16E4	1.43E4	20 %
***	4CH	2008/12/11	11:08:09	7.76E4	2.71E5	1.93E5	71 %
***	4CH	2008/12/11	11:08:09	3.17E5	8.39E4	2.33E5	73 %
***	4CH	2008/12/09	20:23:01	3.62E4	3.59E5	3.22E5	89 %
***	4CH	2008/12/09	20:23:01	4.08E5	6.00E4	3.48E5	85 %
***	4CH	2008/12/09	20:20:15	4.29E4	3.65E5	3.22E5	88 %
***	4CH	2008/12/09	20:20:15	4.02E5	6.75E4	3.35E5	83 %
***	4CH	2008/12/09	20:17:30	3.45E4	3.60E5	3.26E5	90 %
***	4CH	2008/12/09	20:17:30	4.01E5	7.16E4	3.30E5	82 %
***	4CH	2008/12/09	20:14:44	3.96E4	3.56E5	3.17E5	88 %
***	4CH	2008/12/09	20:14:44	4.13E5	6.96E4	3.43E5	83 %
***	4CH	2008/12/09	20:11:12	3.11E4	3.15E5	2.84E5	90 %
***	4CH	2008/12/09	20:11:12	4.09E5	6.16E4	3.47E5	84 %
***	4CH	2008/12/09	20:09:31	2.69E4	3.06E5	2.79E5	91 %
***	4CH	2008/12/09	20:09:31	4.11E5	6.18E4	3.49E5	84 %
***	4CH	2008/12/09	20:07:49	3.45E4	3.08E5	2.73E5	88 %
***	4CH	2008/12/09	20:07:49	4.03E5	5.80E4	3.45E5	85 %
***	4CH	2008/12/09	20:06:08	3.62E4	3.07E5	2.71E5	88 %

Saved experiment : 120 **Data list**

Data list shows data stored in ADAM-MC memory.

Total amount of stored results are indicated at bottom of list as **“Saved experiment”**. Up to 200 counting results are automatically saved to ADAM-MC memory.

When memory of ADAM-MC is full, new counting result will replace old data. These data can be exported as Excel Sheet (\*.xls) and stored in personal computer or can be erased from ADAM-MC memory.

## Information

```


T1 count : 12 - 68
T1 count : 13 - 71
T1 count : 14 - 69
T1 count : 15 - 79
T1 count : 16 - 83
T1 count : 17 - 83
T1 count : 18 - 75
T1 count : 19 - 76
T1 count : 20 - 78
T1 count : 21 - 71
T1 count : 22 - 72
T1 Auto Count : 1030504
T1 error frame : 0
T1 Total : 1604
N1 count : 1 - 95
N1 count : 2 - 64
N1 count : 3 - 64
N1 count : 4 - 92
N1 count : 5 - 69
N1 count : 6 - 91

```

This section shows information regarding operation of ADAM-MC. If cell counting is started through report program, the counting results of each frame that ADAM-MC captures will be shown here.


# Software installation

## Graph

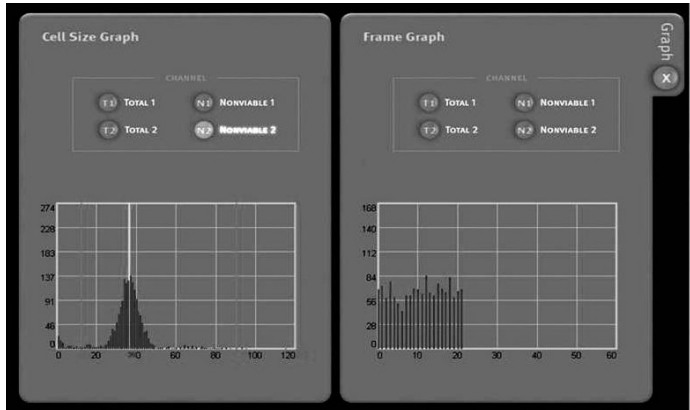

This section shows information of cell size distribution and counting results of each frame that ADAM-MC captured. Through cell size graph, you can figure out whether there are cell clumps or aggregates. In case of counting evenly distributed cells without any aggregation, there should be a single peak on distribution of cell size.

- The size of cell in graph is not real size of cell. It is the size of pixels in fluorescence image captured by ADAM-MC. And the size information is only to judge if there is a lot of aggregated cells.

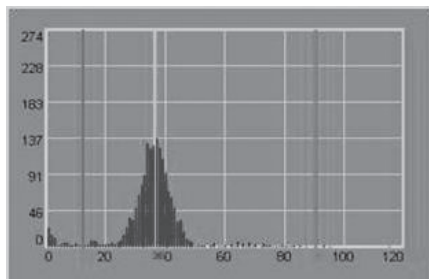


Vertical red line indicates the cut-off size. Counting results between first and second red line are counted as single cell and those between second and third line are counted as 2 cell, and so on. Any results before first red line will not be counted as cell.



# Software installation

## Sample image of error message

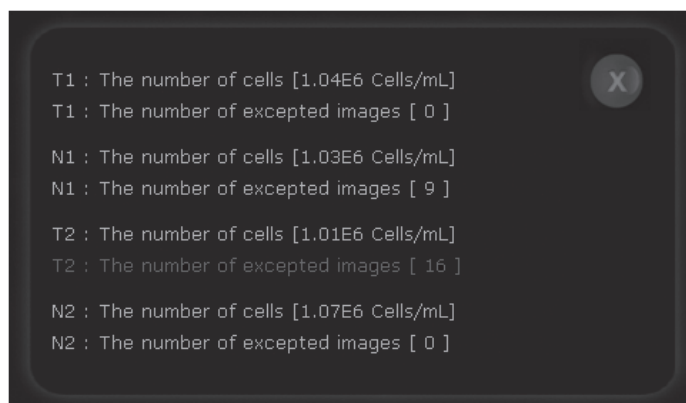

# Trouble shooting

Problem	Cause	Solution
<b>ADAM-MC does not power up</b>	<ul style="list-style-type: none"> <li>· Power switch in off position.</li> <li>· No power from outlet.</li> <li>· Bad power cord.</li> </ul>	<ol style="list-style-type: none"> <li>1. Check power switch on back of unit.</li> <li>2. Check power source.</li> <li>3. Replace.</li> </ol>
<b>Inaccurate result</b>	<ul style="list-style-type: none"> <li>· Cell number may be out of range.</li> <li>· AccuStain Solution has expired.</li> <li>· Too high clumped cells.</li> </ul>	<ol style="list-style-type: none"> <li>1. Adjust the number of cells between <math>5 \times 10^4 \sim 4 \times 10^6</math> cells/mL (refer to page 21).</li> <li>2. Check the expired date.</li> <li>3. Try again after vortexing the cells.</li> </ol>
<b>Software does not work</b>	<ul style="list-style-type: none"> <li>· PC setup incorrect/wrong instruct mode.</li> <li>· Cable's not fully connected/wrong adaptor.</li> </ul>	<ol style="list-style-type: none"> <li>1. Check program setup.</li> <li>2. Check all connections.</li> </ol>
<b>When error message is shown</b> (For information on each error message, see page 23.)	<ul style="list-style-type: none"> <li>· When there are too many frames with errors (<b>Error message: E</b>)</li> </ul>	<ol style="list-style-type: none"> <li>1. Check the suspension of cells if all cells are fully dissociated into single cells.</li> <li>2. If contaminants except cells are found, prepare sample again.</li> </ol>
	<ul style="list-style-type: none"> <li>· When too many cells are loaded (<b>Error message: H</b>)</li> </ul>	<ol style="list-style-type: none"> <li>1. Check if concentration of cell is too high.</li> <li>2. Dilute the sample and count again.</li> </ol>
	<ul style="list-style-type: none"> <li>· Low concentration of cells (<b>Error message: O</b>)</li> </ul>	<ol style="list-style-type: none"> <li>1. Check if concentration of cell is high or not.</li> <li>2. Dilute sample and count again.</li> </ol>
	<ul style="list-style-type: none"> <li>· Low concentration of cells (<b>Error message: L</b>)</li> <li>· Under detection range (<b>Error message: U</b>)</li> </ul>	<ol style="list-style-type: none"> <li>1. Check if concentration of cell is too low.</li> <li>2. Use concentrated sample and count again.</li> </ol>

# Warranty

---

## Warranty

NanoEntek warrants that the ADAM-MC will be free from defects in material and workmanship for a period of one (1) year from date of purchase.

If any defects occur in the ADAM-MC during this warranty period, NanoEntek will repair or replace the defective parts at its discretion without charge.

The following defects, however, are specifically excluded:

- Defects caused by improper operation.
- Repair or modification done by anyone other than NanoEntek or an authorized agent.
- Damage caused by substituting alternative parts.
- Use of fittings or spare parts supplied by anyone other than NanoEntek.
- Damage caused by accident or misuse.
- Damage caused by disaster.
- Corrosion caused by improper solvent or sample.

For your protection, items being returned must be insured against possible damage or loss.

NanoEntek cannot be responsible for damage incurred during shipment of a repair instrument; It is recommend that you save the original packing material in which the instrument was shipped.

This warranty should be limited to the replacement of defective products.

For any inquiry or request for repair service, contact [sales@nanoentek.com](mailto:sales@nanoentek.com) or your local distributor.

# Product list

## Additional product list

Cat. No.	Product	Contents	Quantity
ADM-001	External video monitor (optional)	7" LCD Monitor	1
AD2K-200	AccuChip2X Kit	200 pcs AccuChip2X	1
		12.5 ml AccuStain solution T	2
		12.5 ml AccuStain solution N	1
AD4K-200	AccuChip4X Kit	200 pcs AccuChip4X	1
		12.5 ml AccuStain solution T	2
		12.5 ml AccuStain solution N	1
ADR-1000	AccuStain	12.5 ml AccuStain solution T	4
		12.5 ml AccuStain solution N	2

*\* AD2K-200: Please consult your distributor or manufacture for availability.*







# Contact Information

E-mail : [sales@nanoentek.com](mailto:sales@nanoentek.com)

Website : [www.nanoentek.com](http://www.nanoentek.com)

Developed and Manufactured by NanoEntek, Inc.

## **NanoEntek, Inc.**

851-14, Seohae-ro, Paltan-myeon, Hwaseong-si, Gyeonggi-do, 18531, Korea

Tel: +82-2-6220-7940, Fax: +82-2-6220-7999

## **NanoEntek America, Inc.**

220 Bear Hill Road, Suite 102, Waltham, MA 02451, USA

Tel: +1-781-472-2558 Fax: +1-781-790-5649

